



**TOLL FREE: 1-866-597-0728**

Mon.-Fri. 7:30am - 4:00pm PT

**www.glorystar.tv**

---

## **How to scan for 3ABN Dare To Dream, 3ABN Latino Radio and 3ABN Proclaim**

3ABN has added new channels 3ABN Dare to Dream (D2D) and 3ABN Latino Radio. The 3ABN Proclaim channel has been moved to a new frequency. Current Glorystar receivers will be automatically updated to receive these channels. Automatic updating models are: GEOSATpro DVR1100 / DSR100 / DSR200.

If you have an older receiver (Manhattan, Topfield, Fortec Star) the best method for updating your receiver for all of the Adventist Channels is to delete current programming, scan for the new channels then delete the unwanted channels. Free step by step instructions are provided below for receivers distributed by Adventist broadcasters.

We highly recommend the purchase of a complete Glorystar system or upgrade your old receiver with a new Glorystar receiver. Glorystar receivers have all channel changes in place and automatically update to add new channels as they become available. Please call us at 866-597-0728 and ask the sales team for a Glorystar system or receiver upgrade to watch all the current channels and automatically add any new Glorystar channels.

---

### **BEC 1000 / 2000**

**Important Notice:** Your FREE Adventist channel scanning instructions are provided below. Telephone assistance may be available at an additional charge for "Out Of Warranty" equipment.

If you require additional assistance, please contact the company or broadcaster where you originally purchased your satellite system.

1. Place the BEC 1000 / 2000 satellite receiver on Channel 1
2. Using the remote control press the "MENU" button to display the "Channel List" screen
3. Press Right Arrow button to display "Channel Edit" screen with the TV icon highlighted
4. Press Enter button to display the "TV CH Edit" screen
5. Press Enter button to place a "X" to the left of the channel name
6. Press Down Arrow button to highlight the next channel name
7. Press Enter button to place a "X" to the left of the channel name
8. Repeat steps 6 and 7 until all channels have a "X" beside the channel name
9. Press Menu button to display a pop up window
10. Press Down Arrow 2 times to highlight "Delete"
11. Press Enter button
12. Press Return button to display the "Channel Edit" screen
13. Press Right Arrow button to display "Setup" screen with "CH Search" highlighted
14. Press Enter button to display "Channel Search" screen with "Satellite" highlighted
15. Press Down Arrow button to highlight "Frequency"
16. Using the numeric keypad, enter 11842

# How to scan for 3ABN Dare To Dream, 3ABN Latino Radio and 3ABN Proclaim

(continued)

17. Press Down Arrow button to highlight "Symbol Rate"
18. Using the numeric keypad, enter 22000
19. Press Down Arrow button to highlight "Polarization"
20. Press Enter button to select "Horizontal"
21. Press Down Arrow button to "Scan"
22. Press Enter button to scan for new channels. When the scan is completed a popup window appears " Scan Message: Scan Complete"
23. Press the Return button to enter Channel Search screen.
24. Press Down Arrow button to highlight "Frequency"
25. Using the numeric keypad, enter 12060
26. Press Down Arrow button to highlight "Symbol Rate"
27. Using the numeric keypad, enter 22000
28. Press Down Arrow button to highlight "Polarization"
29. Press Enter button to select "Horizontal"
30. Press Down Arrow button to "Scan"
31. Press Enter button to scan for new channels. When the scan is completed a popup window appears " Scan Message: Scan Complete"
32. Press Return button 3 times to display a popup window "Confirm Save" with "OK" highlighted
33. Press Enter button. The receiver will restart and the new channels will be added to your channel list. Please note that the satellite name will be displayed as AMC4, but it really has been changed to the new satellite Galaxy 19.

## To Remove Unwanted Channels

34. Press the "MENU" button to display the "Channel List" screen
35. Press Right Arrow button to display "Channel Edit" screen with the TV icon highlighted
36. Press Enter button to display the "TV CH Edit" screen
37. Press up or down button to highlight the unwanted channel
38. Press Enter button to place a "X" to the left of the channel name
39. Continue going down the list and mark all unwanted channels with an "X" besides them
40. Press Menu button to display a pop up window
41. Press Down Arrow 2 times to highlight "Delete"
42. Press Enter button to delete
43. Press Return button twice, the prompt will show Confirm Save: Save Change To Database?
44. Press Enter to confirm, pop up window will show Confirm Save Information: Please Wait, Saving Data
45. View programming